

Dual MaxDim Installation Instructions

P/N 9100-001-C & 9100-001-D

PARTS SUPPLIED 9100-001-C:

- 1 ea Dual MaxDim Control P/N 9100-001-C, including STC logbook copy
- 1 ea Fully Insulated Red Female Crimp on Connectors for 16-22 AWG Wire.
- 2 ea Fully Insulated Blue Female Crimp on Connectors for 14-16 AWG Wire.
- 1 ea Reference Panel Label
- 1 ea Install Template
- 1 ea 1/16 in Long Handle Key Allen Wrench
- 1 ea Dual Knob Set

PARTS SUPPLIED 9100-001-D:

- 1 ea Dual MaxDim Control P/N 9100-001-D, including STC logbook copy
- 1 ea Fully Insulated Red Female #6 Crimp on Ring Lug Connector for 16-22 AWG Wire.
- 3 ea Fully Insulated Blue Female #6 Crimp on Ring Lug Connectors for 14-16 AWG Wire.
- 4 ea 6-32 X 1/4 Button Head Socket SS screws including #6 SS Internal Lock Washer
- 1 ea 1/16 in Long Handle Key Allen Wrench
- 1 ea 5/64 in Long Handle Key Allen Wrench
- 1 ea Reference Panel Label
- 1 ea Install Template
- 1 ea Dual Knob Set

NEW INSTALLATION:

1. Locate a convenient place for the Dual MaxDim Control. Using the Template provided, drill two holes. Drill the first one (3/8") at the location where the center of the Dimmer is desired. Drill the second (anti-rotation) hole (11/64"), offset to the left from the first 3/8".
2. Determine the current that the circuit will be required to carry.
3. Test Position the Dual MaxDim Control and determine the length of the wires required.
4. Remove the Dual MaxDim Control and proceed with the installation. From the **WIRE SIZE-CURRENT CAPACITY TABLE**, select the wire size required. If the installation is in an Aircraft, use only MIL-W-16878E/4 Type E, Teflon insulated, Silver-Plated Copper Wire, or equivalent.
5. Find the location of the power source.

9100-001-C WIRING: (PUSH ON CONNECTORS)

1. Install a "**CALCUATED**" breaker for the 9100-001-C Dual MaxDim Controller power source. **The installer should insure that each circuit is properly protected with a circuit breaker or breakers.**
2. Run the supply source wire from the Breaker to the MaxDim controller positive (POS) terminal. Then Select and install a Blue Female crimp on connector on the end of the supply source wire. Push the female connector onto the POS male connector on the MaxDim controller.
3. Using the same technique that was used with the supply source wire, run a wire from the male GND terminal on the MaxDim to system ground. The common (GND) wire is simply a signal wire used by the unit. It does not carry heavy currents during operation. Use a Red Female crimp on connector for this wire. Push this connector onto the male GND terminal of the MaxDim.

Covers Dual MaxDim 9100-001-C & D

9100-001-D WIRING: (SCREW ON CONNECTIONS)

The installation and wiring of the 9100-001-D Dual MaxDim Controller is the same as the wiring instructions for the 9100-001-C except for the connectors attached to the wires. The screw on connections use ring lugs instead of push on connections. Perform the same operations found in the 9100-001-C wiring instructions except crimp ring lugs on the ends of the wires instead of the push on lugs.

1. Install a "**CALCULATED**" breaker for the 9100-001-D Dual MaxDim Controller power source. **The installer should insure that each circuit is properly protected with a circuit breaker or breakers.**
2. Run the supply source wire from the Breaker to the MaxDim controller positive (POS) terminal. Select and install a Blue Female ring lug connector on the end of the supply source wire. Using the button head screw and the lock washer, connect the ring lug to the POS terminal connector on the MaxDim controller.
3. Using the same technique that was used with the supply source wire, run a wire from the terminal GND terminal on the MaxDim to system ground. The common (GND) wire is simply a signal wire used by the unit. It does not carry heavy currents during operation. Use a Red Female ring lug connector for this wire. Using the button head screw and the lock washer, connect the ring lug to the GND terminal of the MaxDim.
4. Again, using the same technique that was used with the source wire, run a wire from the output CKT #1 for the CKT #1 dimming circuit. Select and install a Blue Female ring lug connector on the end of the CKT #1 wire. Using the button head screw and the lock washer, connect the ring lug to terminal CKT #1 on the Dual MaxDim Controller.
5. Again, using the same technique that was used with the source wire, run a wire from output CKT #2 for the CKT #2 dimming circuit. Select and install a Blue Female Crimp Connector. Using the button head screw and the lock washer, connect the ring lug to terminal CKT #2 on the Dual MaxDim Controller.
6. With the Dual MaxDim Control inserted from the rear into the 3/8" drilled hole and with the reference label placed over the threads on the Dual MaxDim Control, install a washer and a nut to hold the Dual MaxDim Control in place. Before tightening the nut, insure that the anti-rotation plastic bump is seated in the 0.170 in (#25) hole and the reference Label is vertically aligned.
7. Install the Dual Knob set using the provided 1/16 in hex wrench.

FUNCTIONAL TEST: BOTH 9100-001-C & D

Turn the dual knobs fully counter clockwise and apply power to the system.


1. Slowly rotate the each knob clockwise. The Lamp Dimmer Circuits will activate and with a continued clockwise rotation the lamps will increase in intensity.
2. Fully Clockwise rotation of each knob independently applies the voltage to the circuit wired to it.
3. Fully Counterclockwise removes the voltage from the Lamp Dimmer Circuit.
4. The Dual MaxDim circuit voltages are continuously variable from off to full on.

DETERMINING THE BREAKER SIZE:

1. Determine total current required by the loads
2. and multiply by 1.2. then Select the next higher rated breaker to use with your Dual MaxDim.

**General Engineering Data Regarding Wire Sizes and Current Capacities Capacity Data
WIRE AND CABLE DERATING CRITERIA FROM MIL-STD-975**

AWG	Diameter	Diameter	Ohms Per	Ohms Per	Maximum	AWG	Derated Current	
Gauge	Inches	mm	1000 Ft	km	Ampere	Gauge	Single	Bundled
14	0.0641	1.6281	2.525	8.282	32	14	19.0	8.5
15	0.0571	1.4503	3.184	10.4435	28	15	16.6	7.4
16	0.0508	1.2903	4.016	13.1725	22	16	13.0	6.5
17	0.0453	1.1506	5.064	16.6099	19	17	11.2	5.6
18	0.0403	1.0236	6.385	20.9428	16	18	9.2	5.0
19	0.0359	0.9119	8.051	26.4073	14	19	8.1	4.4
20	0.032	0.8128	10.15	33.292	11	20	6.5	3.7
21	0.0285	0.7239	12.8	41.984	9	21	5.3	3.0
22	0.0254	0.6452	16.14	52.9392	7	22	4.5	2.5

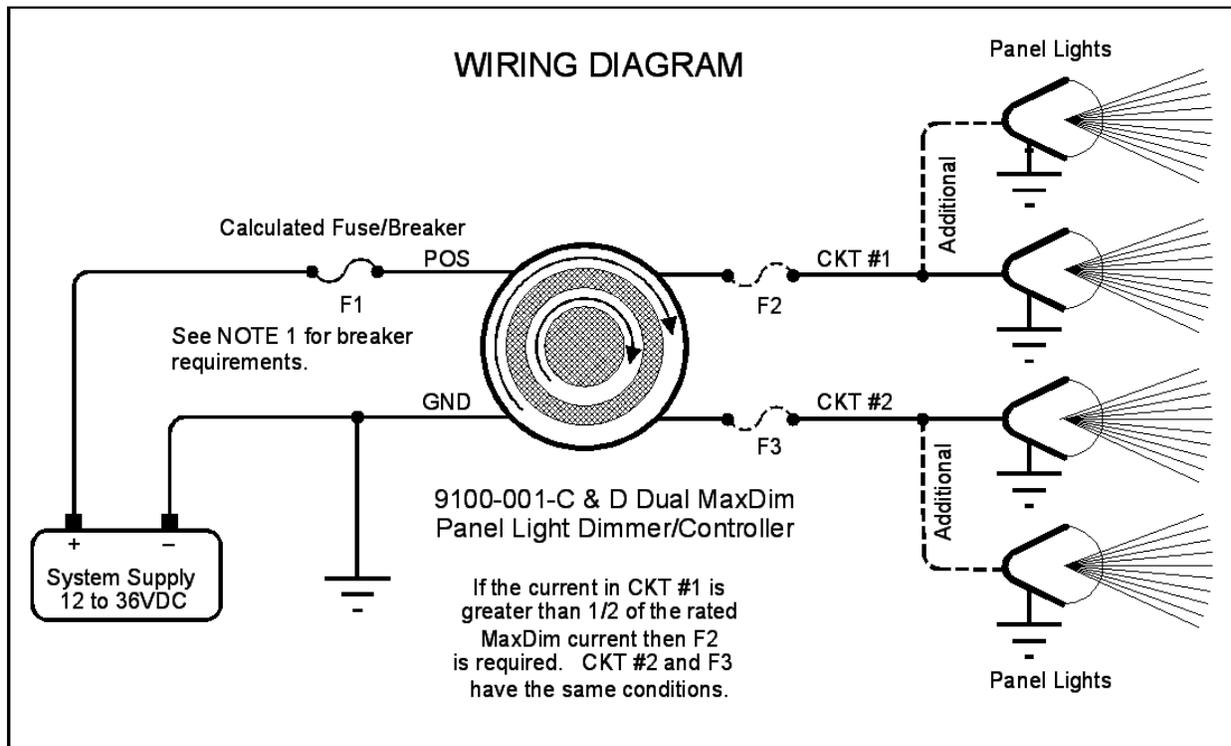

—SPECIFICATIONS—

Voltage Range: 12 to 35VDC

Controlled Output: 0 to 12/35 VDC

9100-001-C: Spade Terminal

Max Current: 12.5 A

Capacity:

- 150 Watts @ 12 VDC
- 300 Watts @ 24 VDC
- 430 Watts @ 35 VDC
-

9100-001-D: Screw Terminal

Max Current: 12.5 A

Capacity:

- 150 Watts @ 12 VDC
- 300 Watts @ 24 VDC
- 430 Watts @ 35 VDC

Operating Temperature range: -30°C to +65°C

Internal Temperature Protect: +85°C

Storage Temperature: -40°C to +100°C

Maximum Internal Temperature: @12.5A X 2
+15 °C above Ambient.

Enclosure Material: Bayer FR 110 Resin


Meets UL 94 Flame Rating: V-2 (0.03in) V-0
(0.059in) 5VB (0.098in) 5VA (0.13in)

Approvals: FAA PMA STC SA01800SE

★ RTCA/DO-160E Tested/Qualified EMI

Potentiometers Rotation: 270 Deg,

Rotational Life: 500KTurns

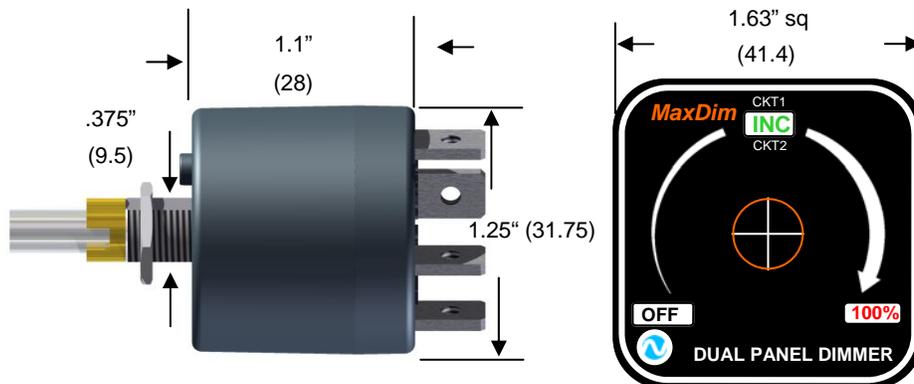

Seaton Engineering Corp

Spokane, WA 99208

CAUTION

Most EFIS, GPS, etc. equipment with screens have their own dimmer control and only the steam gauge instruments and panel lights are controlled by an independent dimmer controller. However, the installing technician and the owner must perform a post installation check for proper function and verification of compatibility with any existing equipment that might appear on these airplanes. With the possibility that there might be Electronic Flight Instrument Systems (EFIS) tied into the existing dimmer circuitry, the FAA has advised that the installing Technician and owner verify that they cannot dim any (EFIS) all the way to zero, so there is no danger of failure of this simple dimmer causing all the (EFIS) displays/instruments to be black. If this incompatibility exists the (EFIS) must be removed from the dimming circuit.

FAA REQUIREMENTS

Amend the weight and balance records and make the necessary log book entry. Complete an FAA form 337 showing the installation of this equipment in accordance with the STC instruction and submit one copy to the FAA and one copy to the aircraft owner. File all data and a copy of the STC with the aircraft records.

INSTRUCTIONS FOR CONTINUED AIRWORTHINESS

The Airworthiness Limitations section is FAA approved and specifies maintenance required under Part 43.16 and 91.403 of the FAR's unless and alternative program has been FAA approved. **Airworthiness Limitation:** MaxDim P/N 9100-001-C & D Light Dimming Controllers, manufactured by Seaton Engineering Corporation have no repairable parts and if a failure occurs, the part must be replaced in its entirety.

ONE YEAR LIMITED WARRANTY

SEC will repair or replace, at its expense and at its option any device manufactured by SEC which in the normal use has proven to be defective in workmanship or material, provided that the customer returns the product prepaid to SEC along with proof of purchase of the product within one year and provides SEC with reasonable opportunity to verify the alleged defect by inspection. SEC will not be responsible for any asserted defect which has resulted from misuse, abuse or over stressing above the published specifications. SEC will under no circumstances be liable for incidental or consequential damages resulting from the defective products This warranty is SEC's Sole warranty and sets forth the customer's exclusive remedy, with respect to defective products; all other warranties, express or implied, whether of merchantability, fitness for purpose, or otherwise, are expressly disclaimed by SEC.

Seaton Engineering Corp. Spokane, WA 99208